


RevN-	Revision note	Date	Signature
0	INITIAL RELEASE	12/7/06	AVD

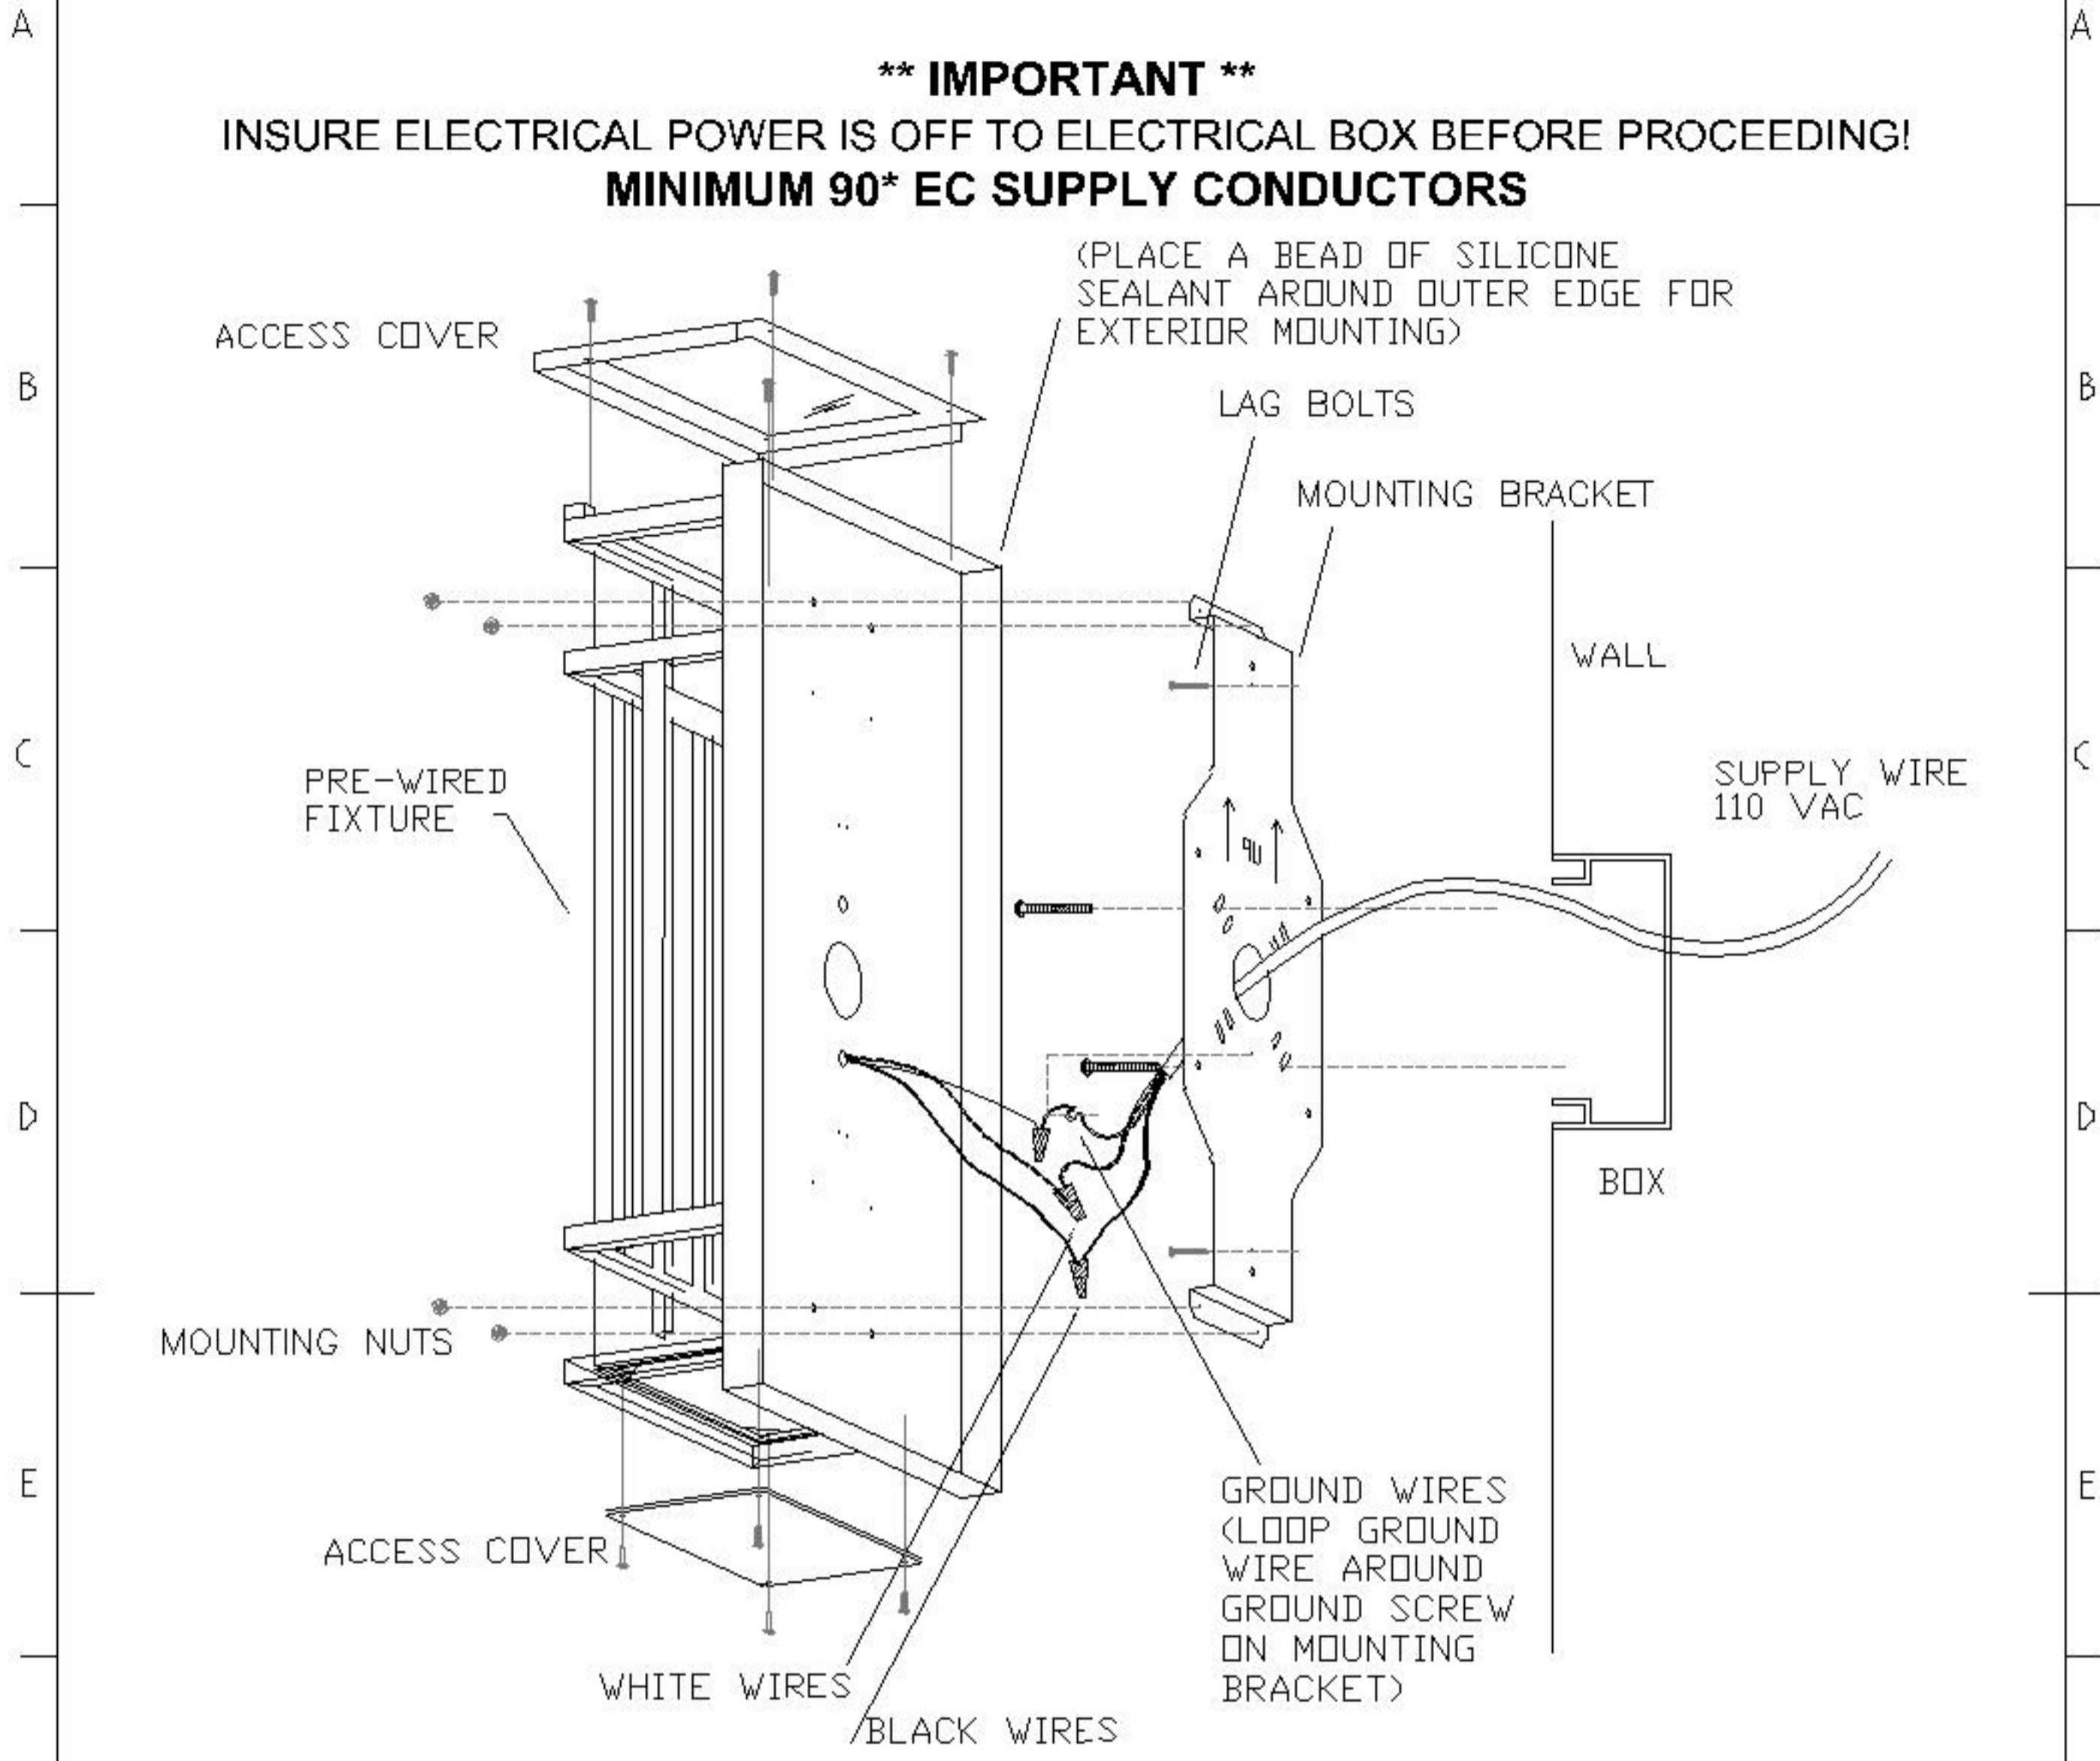

**** IMPORTANT ****
INSURE ELECTRICAL POWER IS OFF TO ELECTRICAL BOX BEFORE PROCEEDING!
MINIMUM 90° EC SUPPLY CONDUCTORS

INSTALLATION STEPS:

- ** IMPORTANT **** INSURE ELECTRICAL SERVICE IS TURNED OFF BEFORE PROCEEDING
1. REMOVE ALL ITEMS FROM BOX. INSPECT FOR DAMAGE AND REPORT DAMAGED ITEM TO STONE MATHER DESIGNS.
 2. FASTEN MOUNTING BRACKET TO OUTLET BOX. INSTALL ADDITIONAL MOUNTING SCREWS / LAG BOLTS (NOT PROVIDED)
 3. CONNECT WHITE WIRE(S) WITH WHITE SUPPLY WIRE AND CONNECT BLACK WIRE(S) WITH BLACK SUPPLY WIRE USING WIRE NUTS.
 4. LOOP BARE COPPER GROUNDING WIRE AROUND GROUND SCREW ON MOUNTING BRACKET AND TIGHTEN. CONNECT GROUNDING WIRE(S) FROM OUTLET BOX WITH BARE COPPER GROUNDING WIRE FROM FIXTURE USING WIRE NUT. (WIRE PER LOCAL CODE)
 5. PLACE FIXTURE OVER MOUNTING BRACKET STUDS AND SECURE WITH LOCK NUT'S (4X), TIGHTEN TO SECURE TO WALL. (PLACE A BEAD OF SILICONE SEALANT AROUND OUTER EDGE FOR EXTERIOR MOUNTING)
 7. INSTALL LAMPS AND UPPER LOWER ACCESS COVERS

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED AND OR A QUALIFIED ELECTRICIAN.

UNDERWRITERS LABORATORIES COMPLIANCE	
U_L	1. INCANDESCENT FILE # E170691
	2. FLUORESCENT FILE # E172522

STONE MATHER DESIGNS
 4444 Tower Rd. SW
 Albuquerque, NM 87121
 Phone (505) 247-4276
 Fax (505) 247-4538

INSTALLATION INSTRUCTIONS		
CL-GA24		
Date	12/17/2114	Designed by AVD
		Sheet 1/1