


RevN-	Revision note	Date	Signature
0	INITIAL RELEASE	3/21/07	AVD

**** IMPORTANT ****
INSURE ELECTRICAL POWER IS OFF TO ELECTRICAL BOX BEFORE PROCEEDING!
MINIMUM 90° EC SUPPLY CONDUCTORS

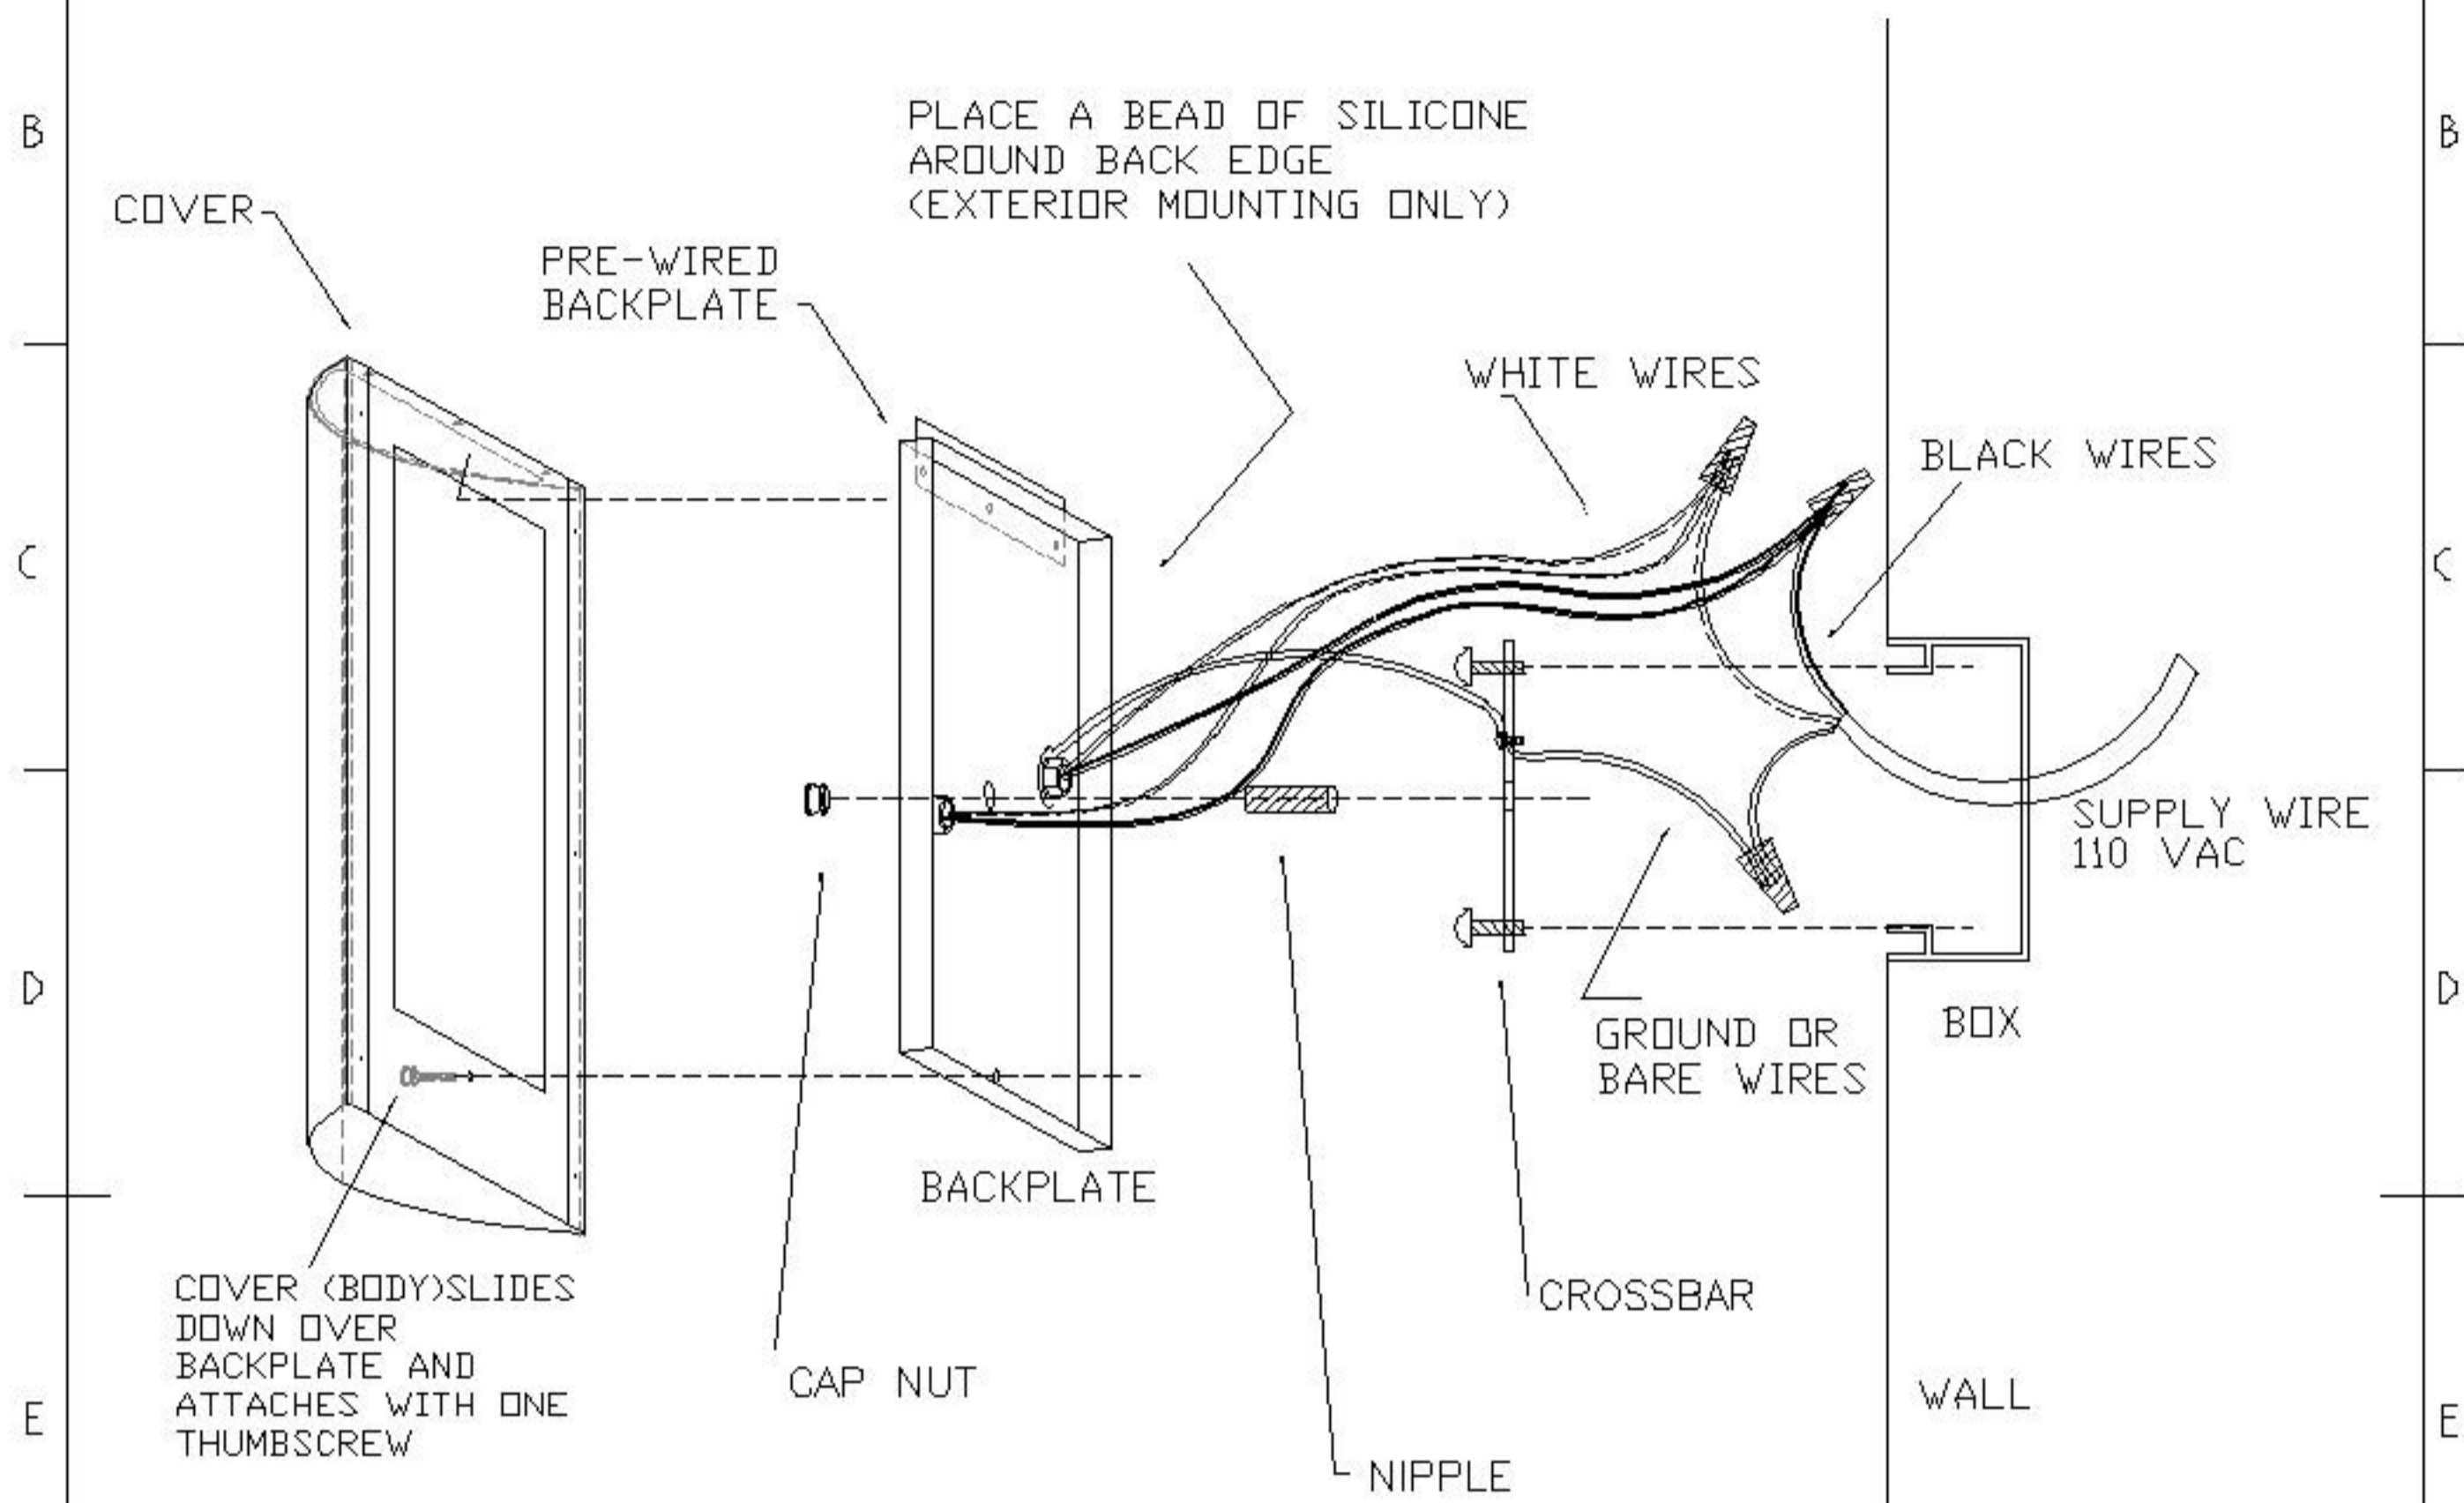

INSTALLATION STEPS:

**** IMPORTANT **** INSURE ELECTRICAL SERVICE IS TURNED OFF BEFORE PROCEEDING

1. REMOVE ALL ITEMS FROM BOX. INSPECT FOR DAMAGE AND REPORT DAMAGED ITEM TO STONE MATHER DESIGNS.
2. FASTEN MOUNTING CROSS BAR TO OUTLET BOX.
3. CONNECT WHITE WIRE(S) WITH WHITE SUPPLY WIRE AND CONNECT BLACK WIRE(S) WITH BLACK SUPPLY WIRE USING WIRE NUTS.
4. LOOP BARE COPPER GROUNDING WIRE AROUND GROUND SCREW ON CROSS BAR AND TIGHTEN. CONNECT GROUNDING WIRE(S) FROM OUTLET BOX WITH BARE COPPER GROUNDING WIRE FROM FIXTURE USING WIRE NUT.
5. PLACE A BEAD OF SILICONE SEALANT AROUND BACK EDGE OF BACKPLATE (FOR EXTERIOR MOUNTING ONLY)
6. PLACE BACKPLATE OVER NIPPLE AND SECURE WITH CAP NUT, TIGHTEN TO SECURE TO WALL.
7. INSTALL LAMPS (NOT INCLUDED) THEN SLIDE COVER DOWN, OVER BACKPLATE AND SECURE WITH THUMBSCREW

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED AND OR A QUALIFIED ELECTRICIAN.

UNDERWRITERS LABORATORIES COMPLIANCE



1. INCANDESCENT FILE # E170691
 2. FLUORESCENT FILE # E172522

STONE MATHER DESIGNS

4444 Tower Rd. SW
 Albuquerque, NM 87121
 Phone (505) 247-4276
 Fax (505) 247-4538

INSTALLATION INSTRUCTIONS

SCONCE
 CL-GL*-*

Date: 4/3/2115 Designed by: AVD Sheet: 1/1