


RevNo	Revision note	Date	Signature
0	INITIAL RELEASE	3/26/04	AVD

A | A

**** IMPORTANT ****
INSURE ELECTRICAL POWER IS OFF TO ELECTRICAL BOX BEFORE PROCEEDING!
MINIMUM 90° EC SUPPLY CONDUCTORS

B | B

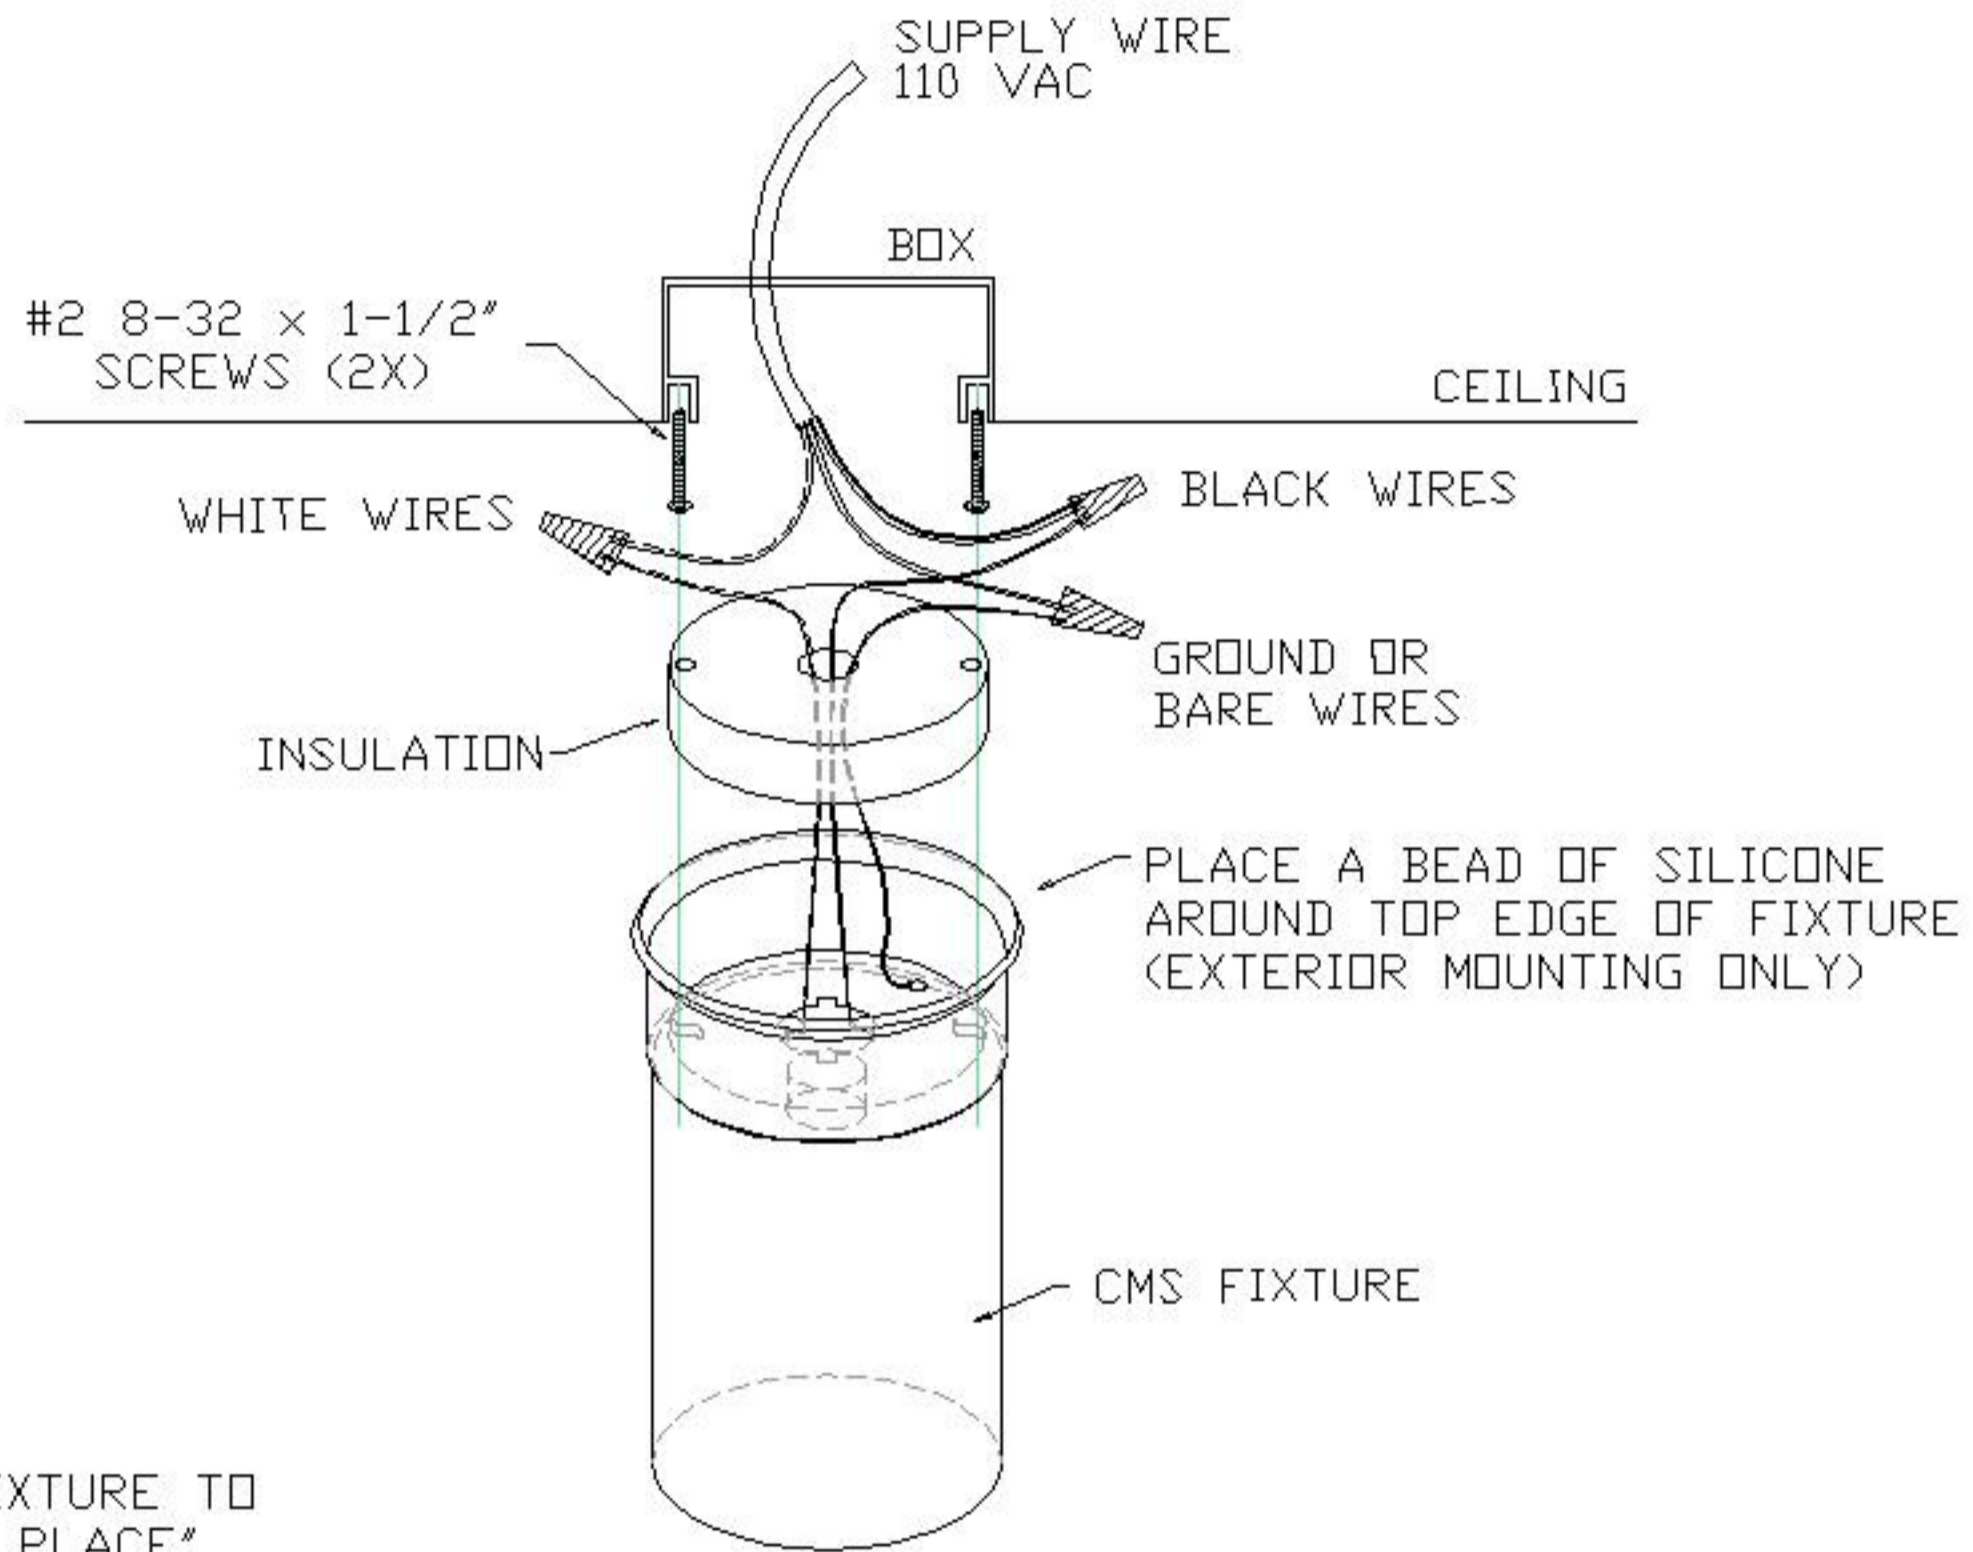


C | C

D | D

E | E

#6 TURN FIXTURE TO "LOCK IN PLACE"

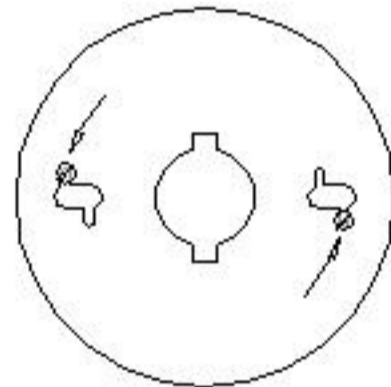

INSTALLATION STEPS:

**** IMPORTANT **** INSURE ELECTRICAL SERVICE IS TURNED OFF BEFORE PROCEEDING

1. REMOVE ALL ITEMS FROM BOX. INSPECT FOR DAMAGE AND REPORT DAMAGED ITEM TO STONE MATHER DESIGNS.
2. INSTALL 8-32 X 1-1/2" SCREWS TO OUTLET BOX.
3. FEED FIXTURE WIRES THROUGH INSULATION AS SHOWN
4. CONNECT WHITE WIRE(S) WITH WHITE SUPPLY WIRE, CONNECT BLACK WIRE(S) WITH BLACK SUPPLY WIRE AND CONNECT GROUNDING WIRE(S) FROM OUTLET BOX WITH BARE COPPER GROUNDING WIRE FROM FIXTURE USING WIRE NUTS.
5. PLACE A BEAD OF SILICONE SEALANT AROUND TOP EDGE OF FIXTURE (FOR EXTERIOR MOUNTING ONLY)
6. PLACE FIXTURE OVER 8-32 X 1-1/2" SCREW HEADS. TURN FIXTURE BODY TO "LOCK IN PLACE" TIGHTEN SCREWS TO SECURE TO CEILING.

F | F

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED AND OR A QUALIFIED ELECTRICIAN.

G | G

H | H

UNDERWRITERS LABORATORIES COMPLIANCE



1. INCANDESCENT FILE # E170661
2. FLUORESCENT FILE # E172322

STONE MATHER DESIGNS

4444 Tower Rd. SW
 Albuquerque, NM 87121
 Phone (505) 247-4276
 Fax (505) 247-4538

INSTALLATION INSTRUCTIONS

CMS
 CEILING MOUNT SPOT

Date	3/26/2004	Designed by	AVD	Sheet	1/1
------	-----------	-------------	-----	-------	-----