



RevN-	Revision note	Date	Signature
0	INITIAL RELEASE	6/24/04	AVD

**** IMPORTANT ****
INSURE ELECTRICAL POWER IS OFF TO ELECTRICAL BOX BEFORE PROCEEDING!
MINIMUM 90° EC SUPPLY CONDUCTORS

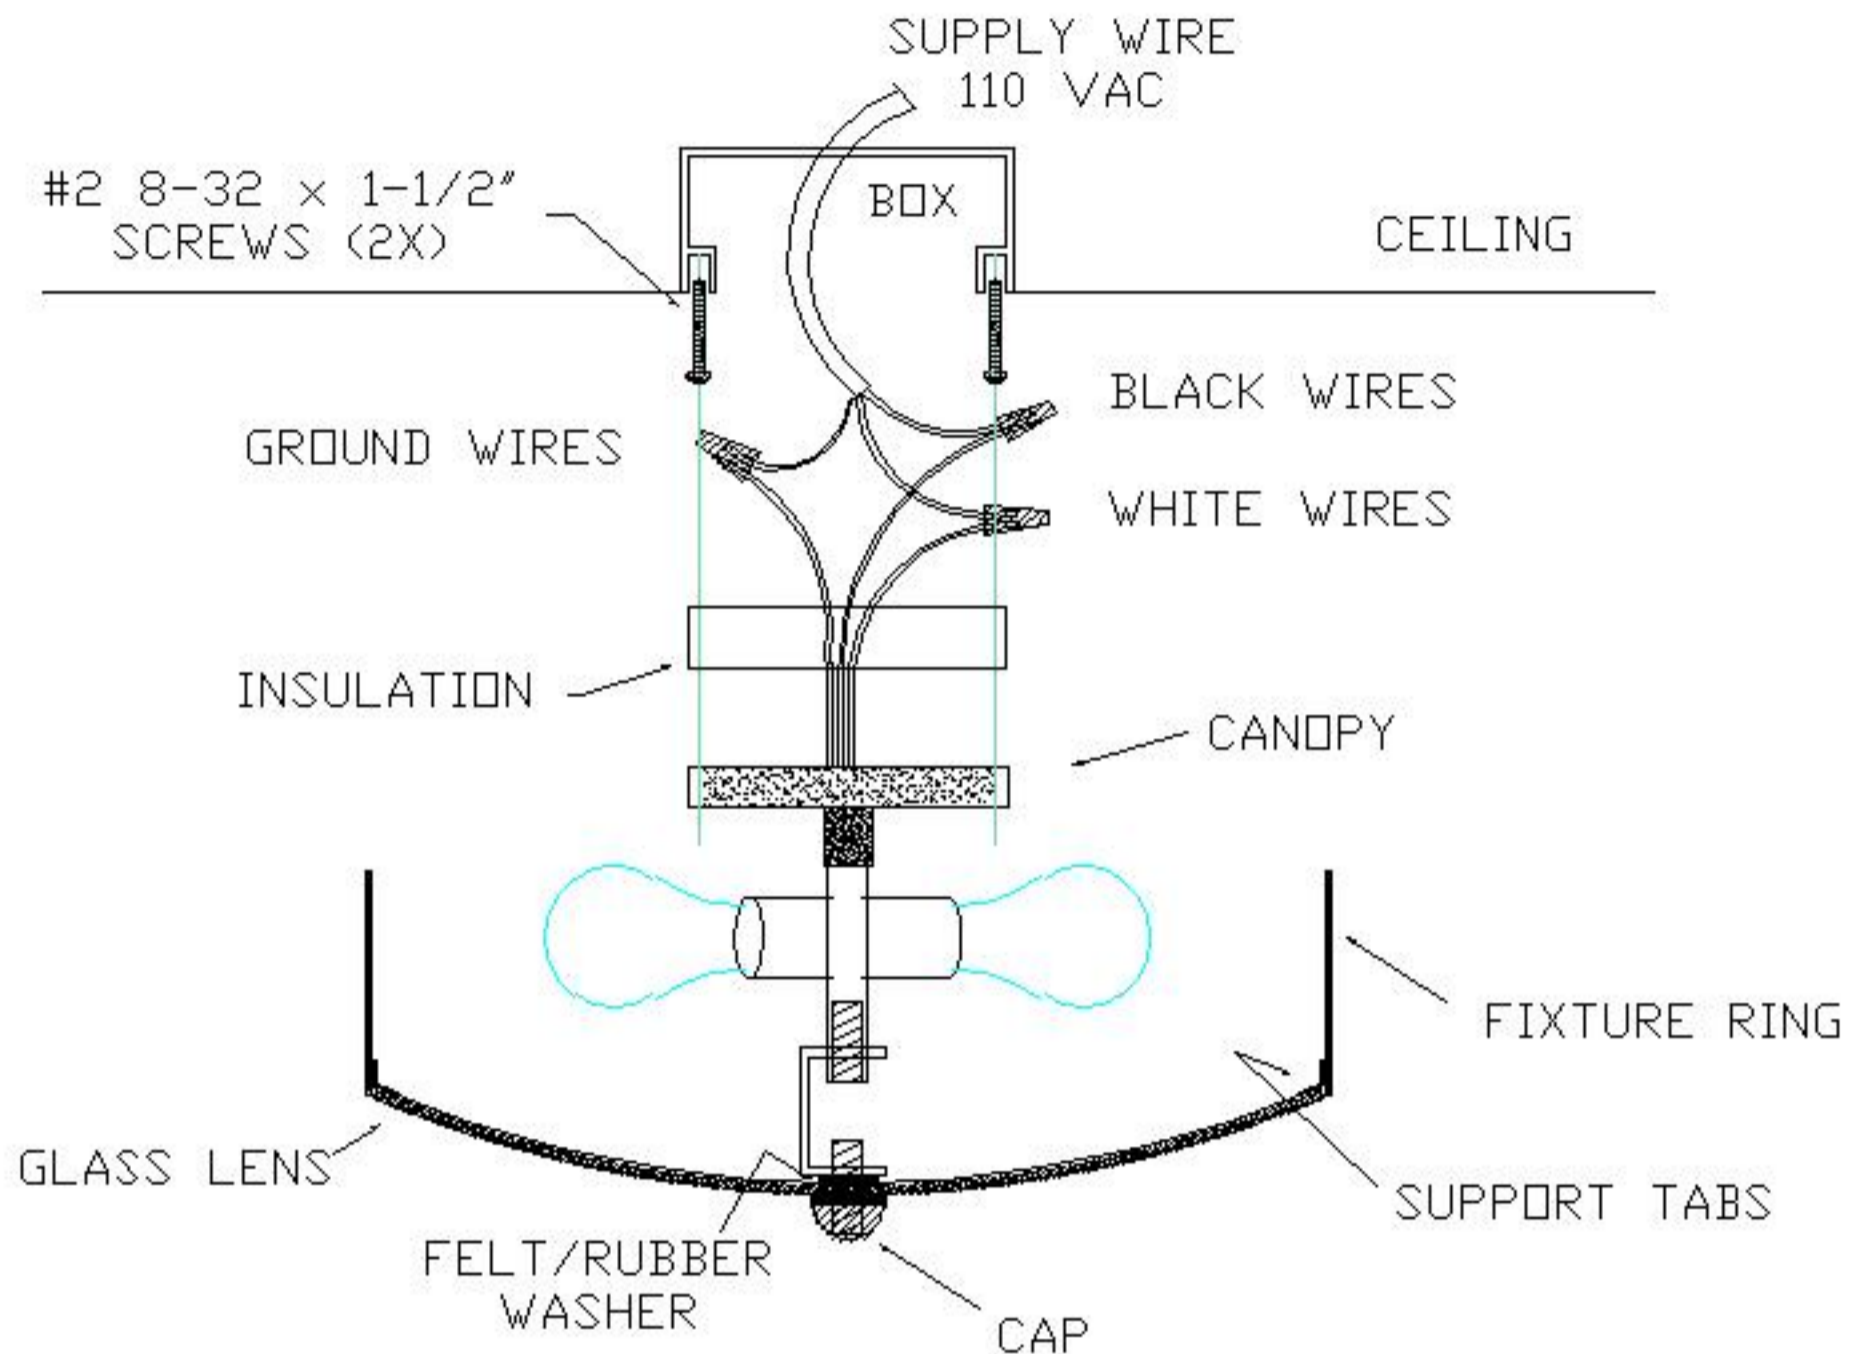

#5 TURN CANOPY TO "LOCK IN PLACE"

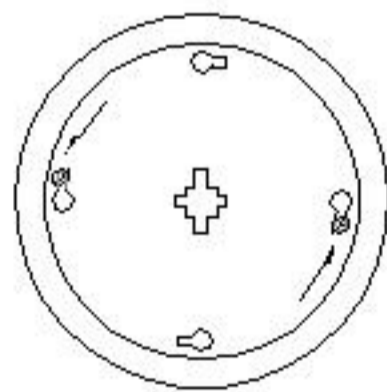

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED AND OR A QUALIFIED ELECTRICIAN.

INSTALLATION STEPS:

**** IMPORTANT **** INSURE ELECTRICAL SERVICE IS TURNED OFF BEFORE PROCEEDING

1. REMOVE ALL ITEMS FROM BOX. INSPECT FOR DAMAGE AND REPORT DAMAGED ITEM TO STONE MATHER DESIGNS.
2. INSTALL 8-32 X 1-1/2" SCREWS TO OUTLET BOX.
3. FEED FIXTURE WIRES THROUGH INSULATION AS SHOWN
4. CONNECT WHITE WIRE(S) WITH WHITE SUPPLY WIRE, CONNECT BLACK WIRE(S) WITH BLACK SUPPLY WIRE AND CONNECT GROUNDING WIRE(S) FROM OUTLET BOX WITH BARE COPPER GROUNDING WIRE FROM FIXTURE USING WIRE NUTS.
5. PLACE FIXTURE OVER 8-32 X 1-1/2" SCREW HEADS. TURN CANOPY TO "LOCK IN PLACE" TIGHTEN SCREWS TO SECURE TO CEILING.
6. PLACE FELT/RUBBER WASHER, FIXTURE RING AND GLASS OVER NIPPLE AND SECURE WITH CAP NUT.
 CAUTION: DO NOT OVER TIGHTEN CAP NUT "GLASS MAY CRACK".

NOTE: MAINTAIN MAXIMUM DISTANCE BETWEEN CEILING AND METAL RING FOR VENTILATION.

UNDERWRITERS LABORATORIES COMPLIANCE



1. INCANDESCENT FILE #E170691
 2. FLUORESCENT FILE #E172522

STONE MATHER DESIGNS

4444 Tower Rd. SW
 Albuquerque, NM 87121
 Phone (505) 247-4276
 Fax (505) 247-4538

INSTALLATION INSTRUCTIONS

CEILING RING
 CR

Date	6/24/2014	Designed by	AVD	Sheet	1/1
------	-----------	-------------	-----	-------	-----