


RevN-	Revision Note	Date	Signature
0	INITIAL RELEASE	9/25/04	AVD
A	DETACHED STEM ASSEMBLY	12/23/05	AVD
B	DIMMING	6/11/08	AVD

**\*\* IMPORTANT \*\***  
**INSURE ELECTRICAL POWER IS OFF TO ELECTRICAL BOX BEFORE PROCEEDING!**  
**MINIMUM 90° EC SUPPLY CONDUCTORS**

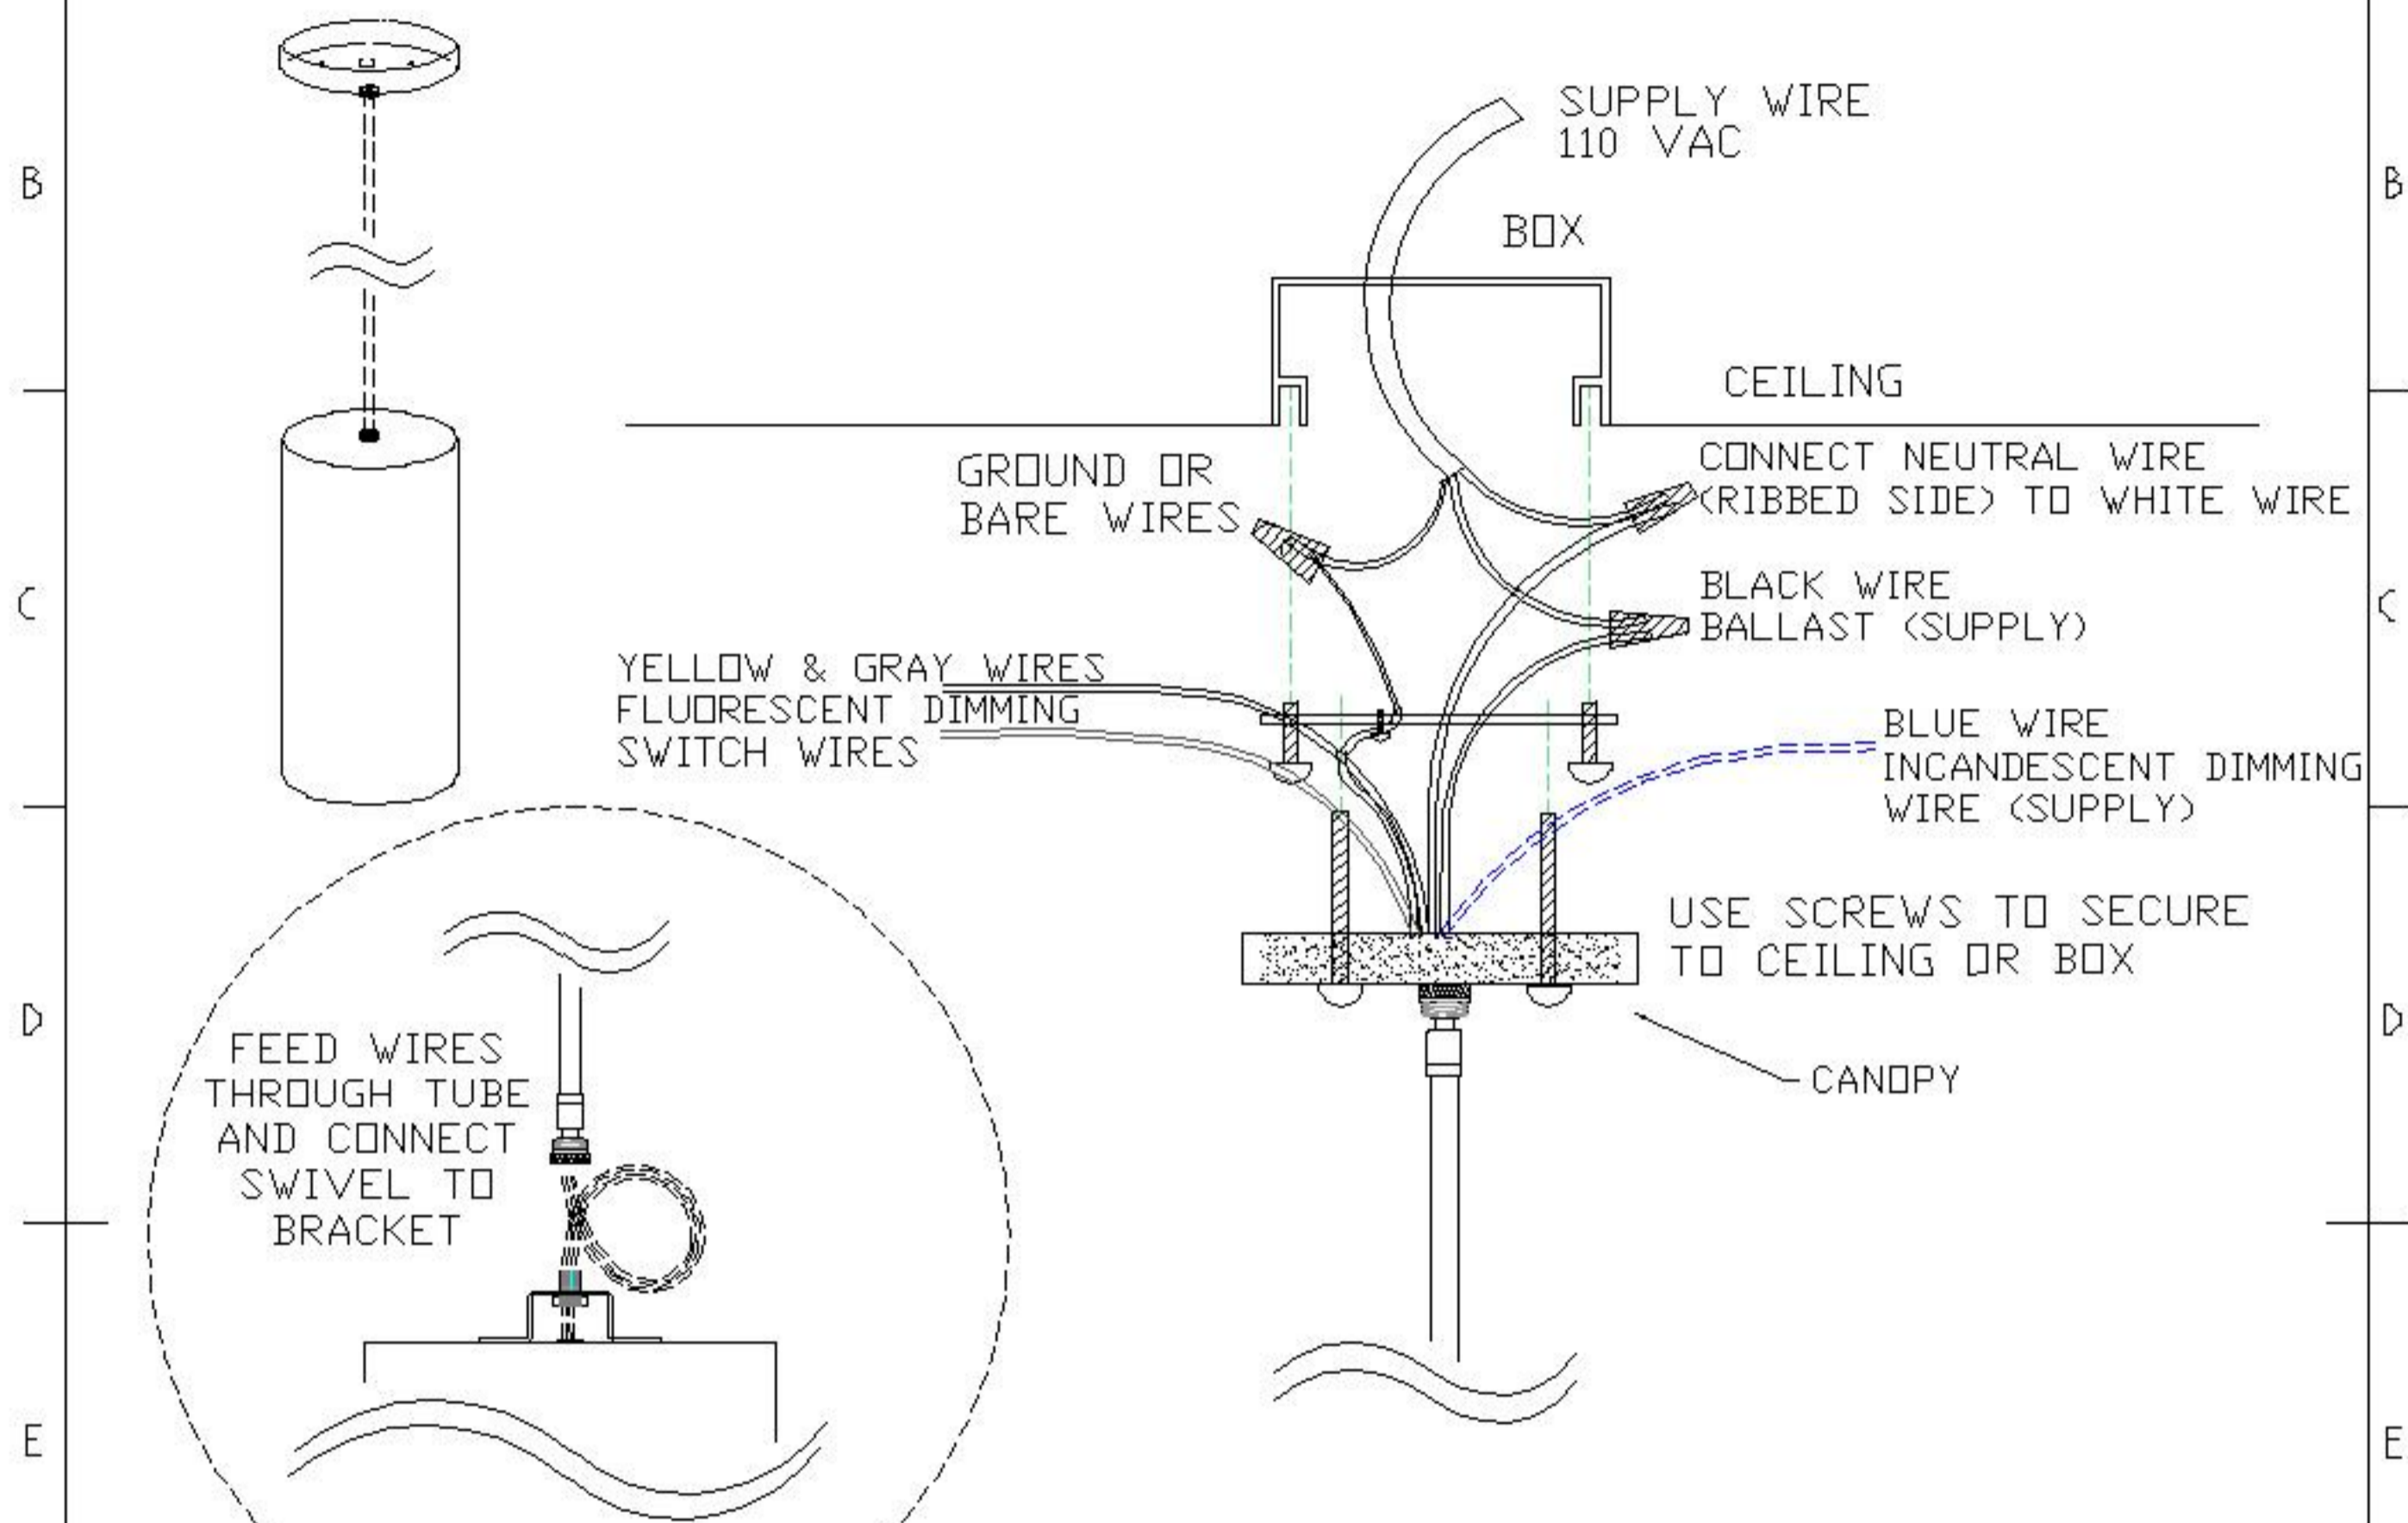

**INSTALLATION STEPS:**

**\*\* IMPORTANT \*\*** INSURE ELECTRICAL SERVICE IS TURNED OFF BEFORE PROCEEDING

1. REMOVE ALL ITEMS FROM BOX. INSPECT FOR DAMAGE AND REPORT DAMAGED ITEM TO STONE MATHER DESIGNS.
2. FEED WIRES THROUGH TUBE AND CONNECT SWIVEL TO CYLINDER BRACKET, TIGHTEN SWIVEL TO SECURE
3. FASTEN MOUNTING CROSS BAR TO OUTLET BOX.
4. CONNECT NEUTRAL WIRE WITH WHITE SUPPLY WIRE AND CONNECT HOT WIRE WITH BLACK SUPPLY WIRE USING WIRE NUTS.
5. LOOP GROUNDING WIRE AROUND GROUND SCREW ON CROSS BAR AND TIGHTEN. CONNECT GROUNDING WIRE FROM OUTLET BOX WITH GROUNDING WIRE FROM FIXTURE USING WIRE NUT.
6. SEE BALLAST MFG INSTRUCTIONS FOR WIRING DIMMING WIRES
7. THREAD SCREWS FROM CANOPY INTO CROSSBAR BRACKET AND TIGHTEN TO SECURE TO CEILING.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED AND OR A QUALIFIED ELECTRICIAN.

UNDERWRITERS LABORATORIES COMPLIANCE

**U L**

1. INCANDESCENT FILE #E170691  
 2. FLUORESCENT FILE #E172522

**STONE MATHER DESIGNS**

4444 Tower Rd. SW  
 Albuquerque, NM 87121  
 Phone (505) 247-4276  
 Fax (505) 247-4538

INSTALLATION INSTRUCTIONS

SPECIAL ORDER  
 DIMMING CYLINDER WITH  
 DETACHED STEM

Date 9/25/2014  
 Designed by AVD  
 Sheet 1/1

H

H