


RevN-	Revision Note	Date	Signature
0	INITIAL RELEASE	4/14/05	AVD


**\*\* IMPORTANT \*\***  
**INSURE ELECTRICAL POWER IS OFF TO ELECTRICAL BOX BEFORE PROCEEDING!**  
**MINIMUM 90° EC SUPPLY CONDUCTORS**

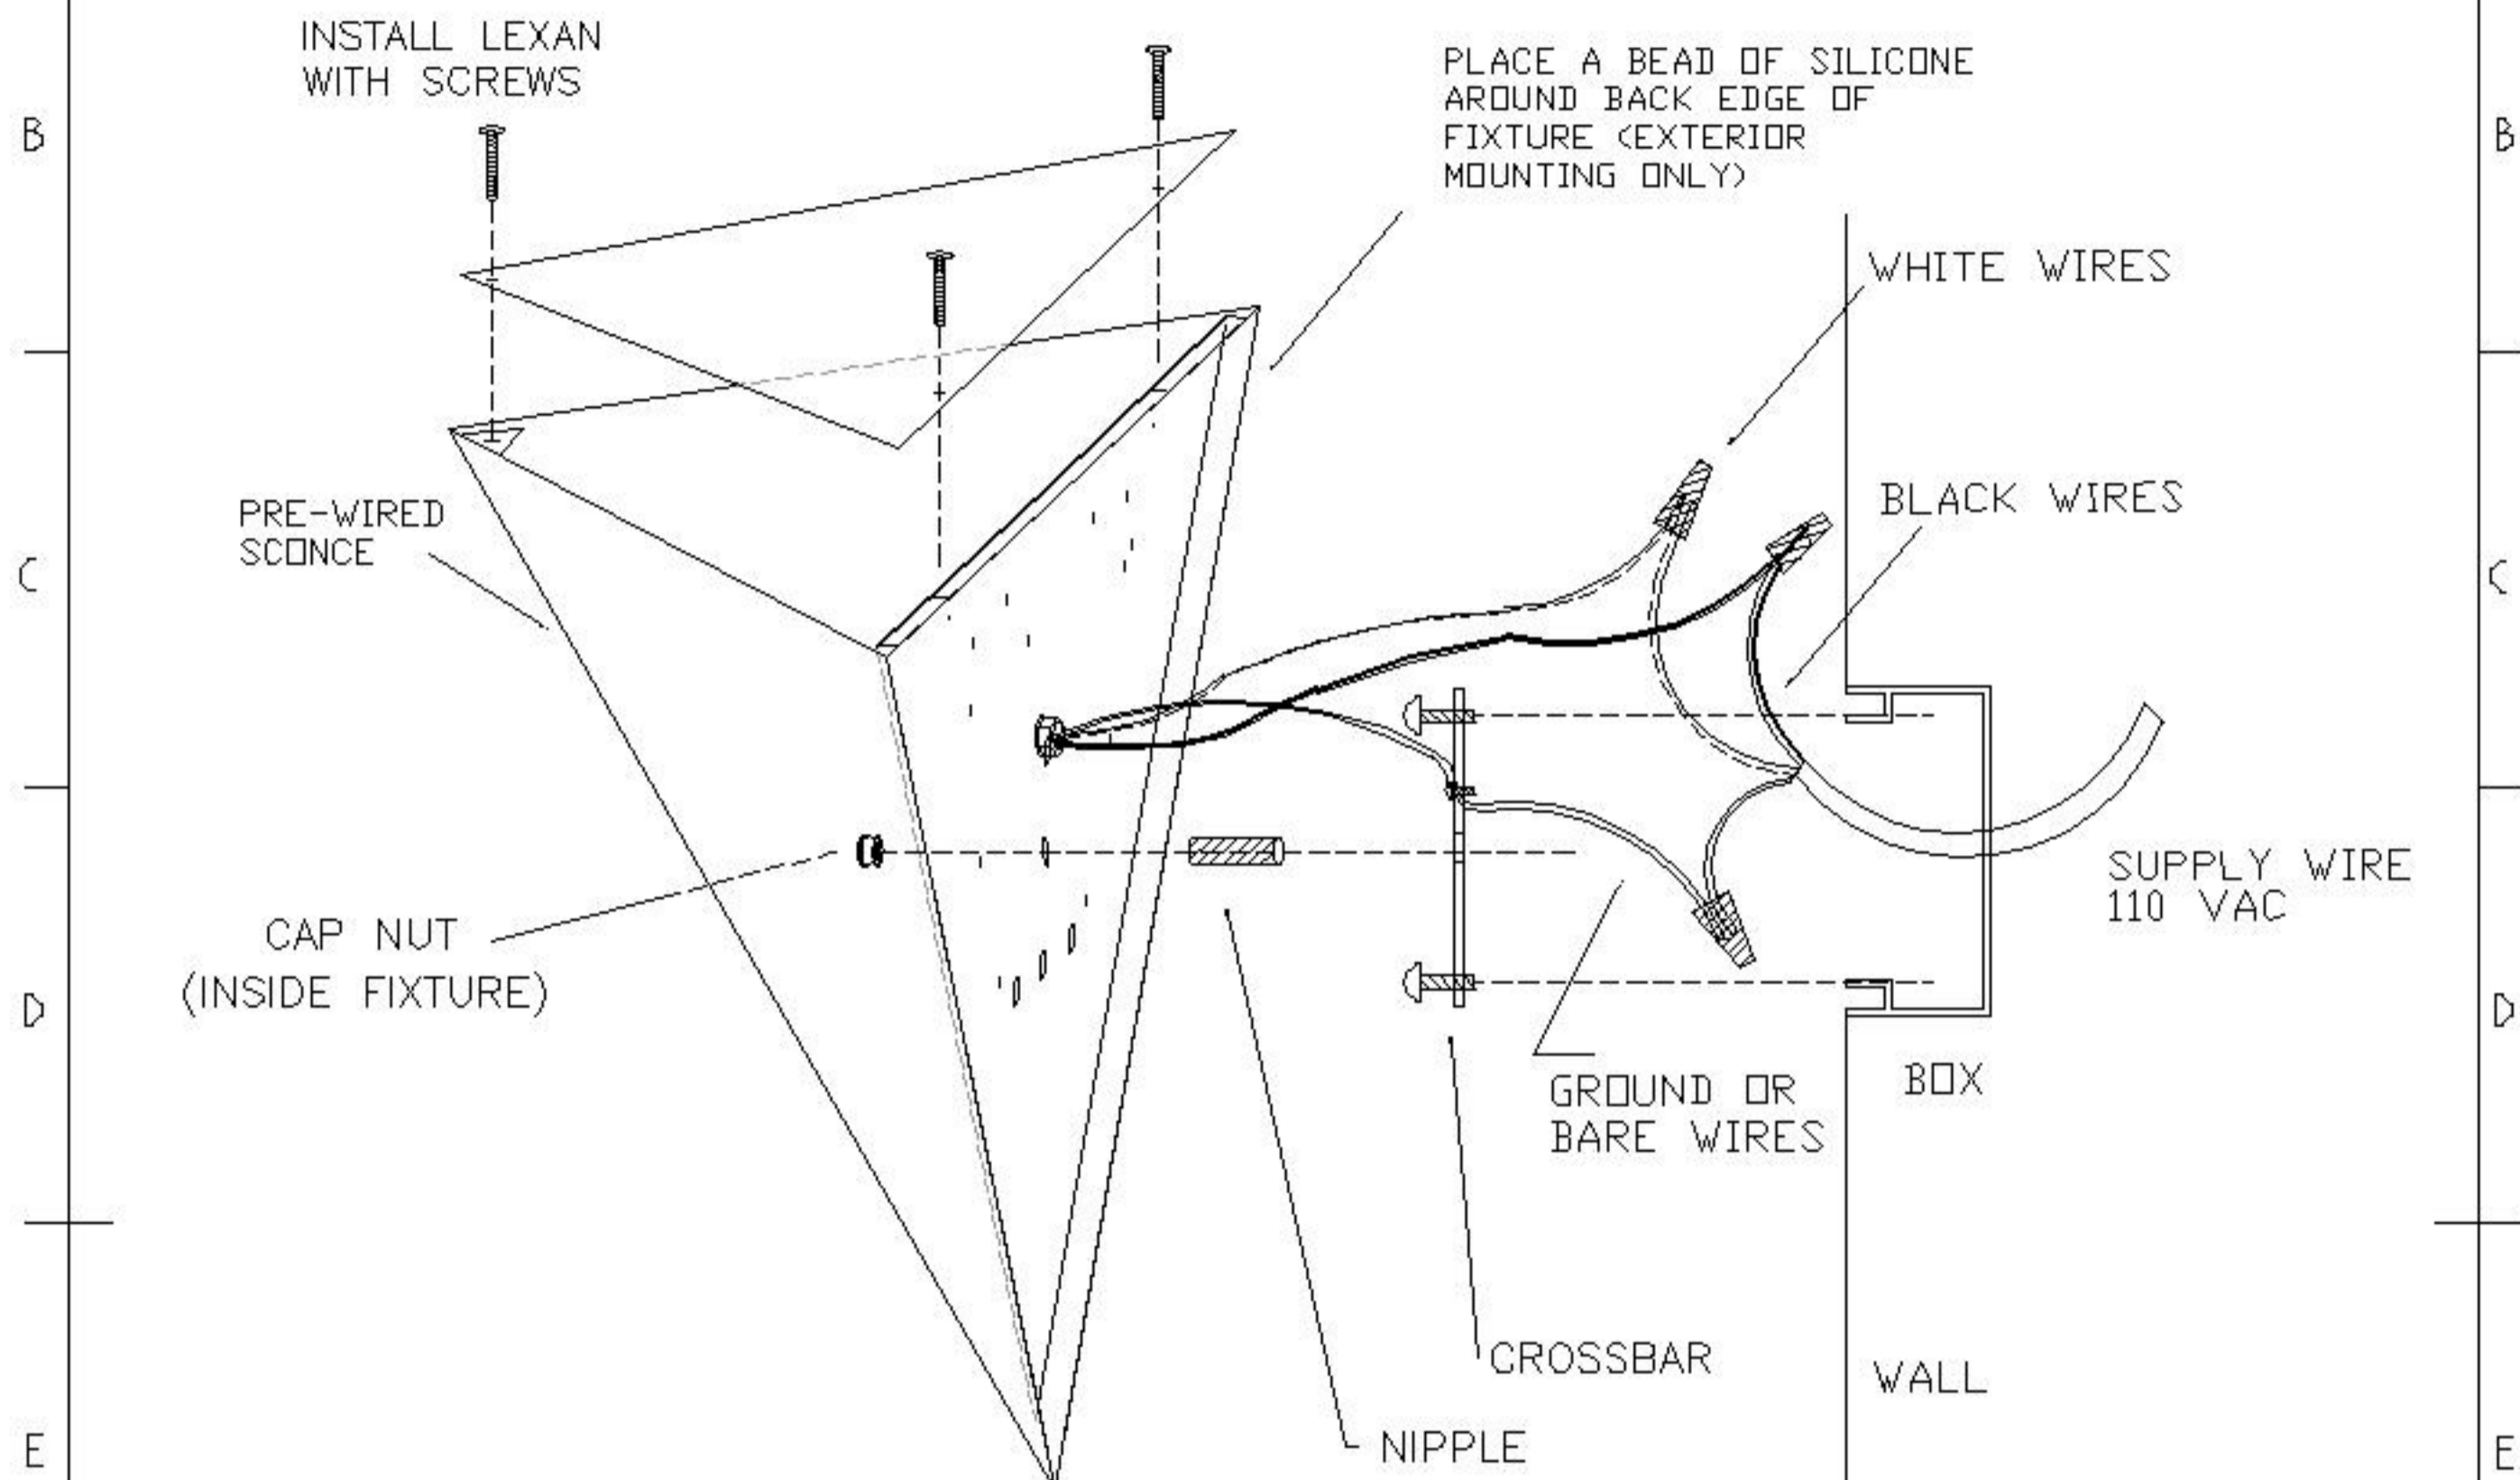

**INSTALLATION STEPS:**

**\*\* IMPORTANT \*\*** INSURE ELECTRICAL SERVICE IS TURNED OFF BEFORE PROCEEDING

1. REMOVE ALL ITEMS FROM BOX. INSPECT FOR DAMAGE AND REPORT ANY DAMAGED ITEMS TO STONE MATHER DESIGNS.
2. FASTEN MOUNTING CROSS BAR TO OUTLET BOX.
3. CONNECT WHITE WIRE(S) WITH WHITE SUPPLY WIRE AND CONNECT BLACK WIRE(S) WITH BLACK SUPPLY WIRE USING WIRE NUTS.
4. LOOP BARE COPPER GROUNDING WIRE AROUND GROUND SCREW ON CROSS BAR AND TIGHTEN. CONNECT GROUNDING WIRE(S) FROM OUTLET BOX WITH BARE COPPER GROUNDING WIRE FROM FIXTURE USING WIRE NUT.
5. PLACE A BEAD OF SILICONE SEALANT AROUND BACK EDGE OF FIXTURE (FOR EXTERIOR MOUNTING ONLY)
6. PLACE FIXTURE OVER NIPPLE AND SECURE WITH CAP NUT, TIGHTEN TO SECURE TO WALL.
7. INSTALL LAMP(S) (NOT PROVIDED) AND LEXAN WITH SCREWS (PROVIDED)

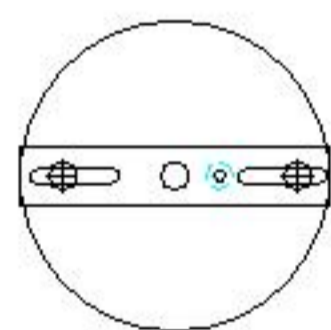

CONNECT CROSS BAR TO JUNCTION BOX

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED AND OR A QUALIFIED ELECTRICIAN.

UNDERWRITERS LABORATORIES COMPLIANCE 	<b>1. INCANDESCENT FILE # E170691</b> <b>2. FLUORESCENT FILE # E172522</b>	 4444 Tower Rd. SW Albuquerque, NM 87121 Phone (505) 247-4276 Fax (505) 247-4538	<b>INSTALLATION INSTRUCTIONS</b> <b>INVERTED TRIANGLE SCONCE</b> LTE-14.5, LTE-11.5		
			Date	4/14/2005	Designed by