


RevN-	Revision Note	Date	Signature
0	INITIAL RELEASE	3/24/04	AVD

**** IMPORTANT ****
INSURE ELECTRICAL POWER IS OFF TO ELECTRICAL BOX BEFORE PROCEEDING!
MINIMUM 90° EC SUPPLY CONDUCTORS

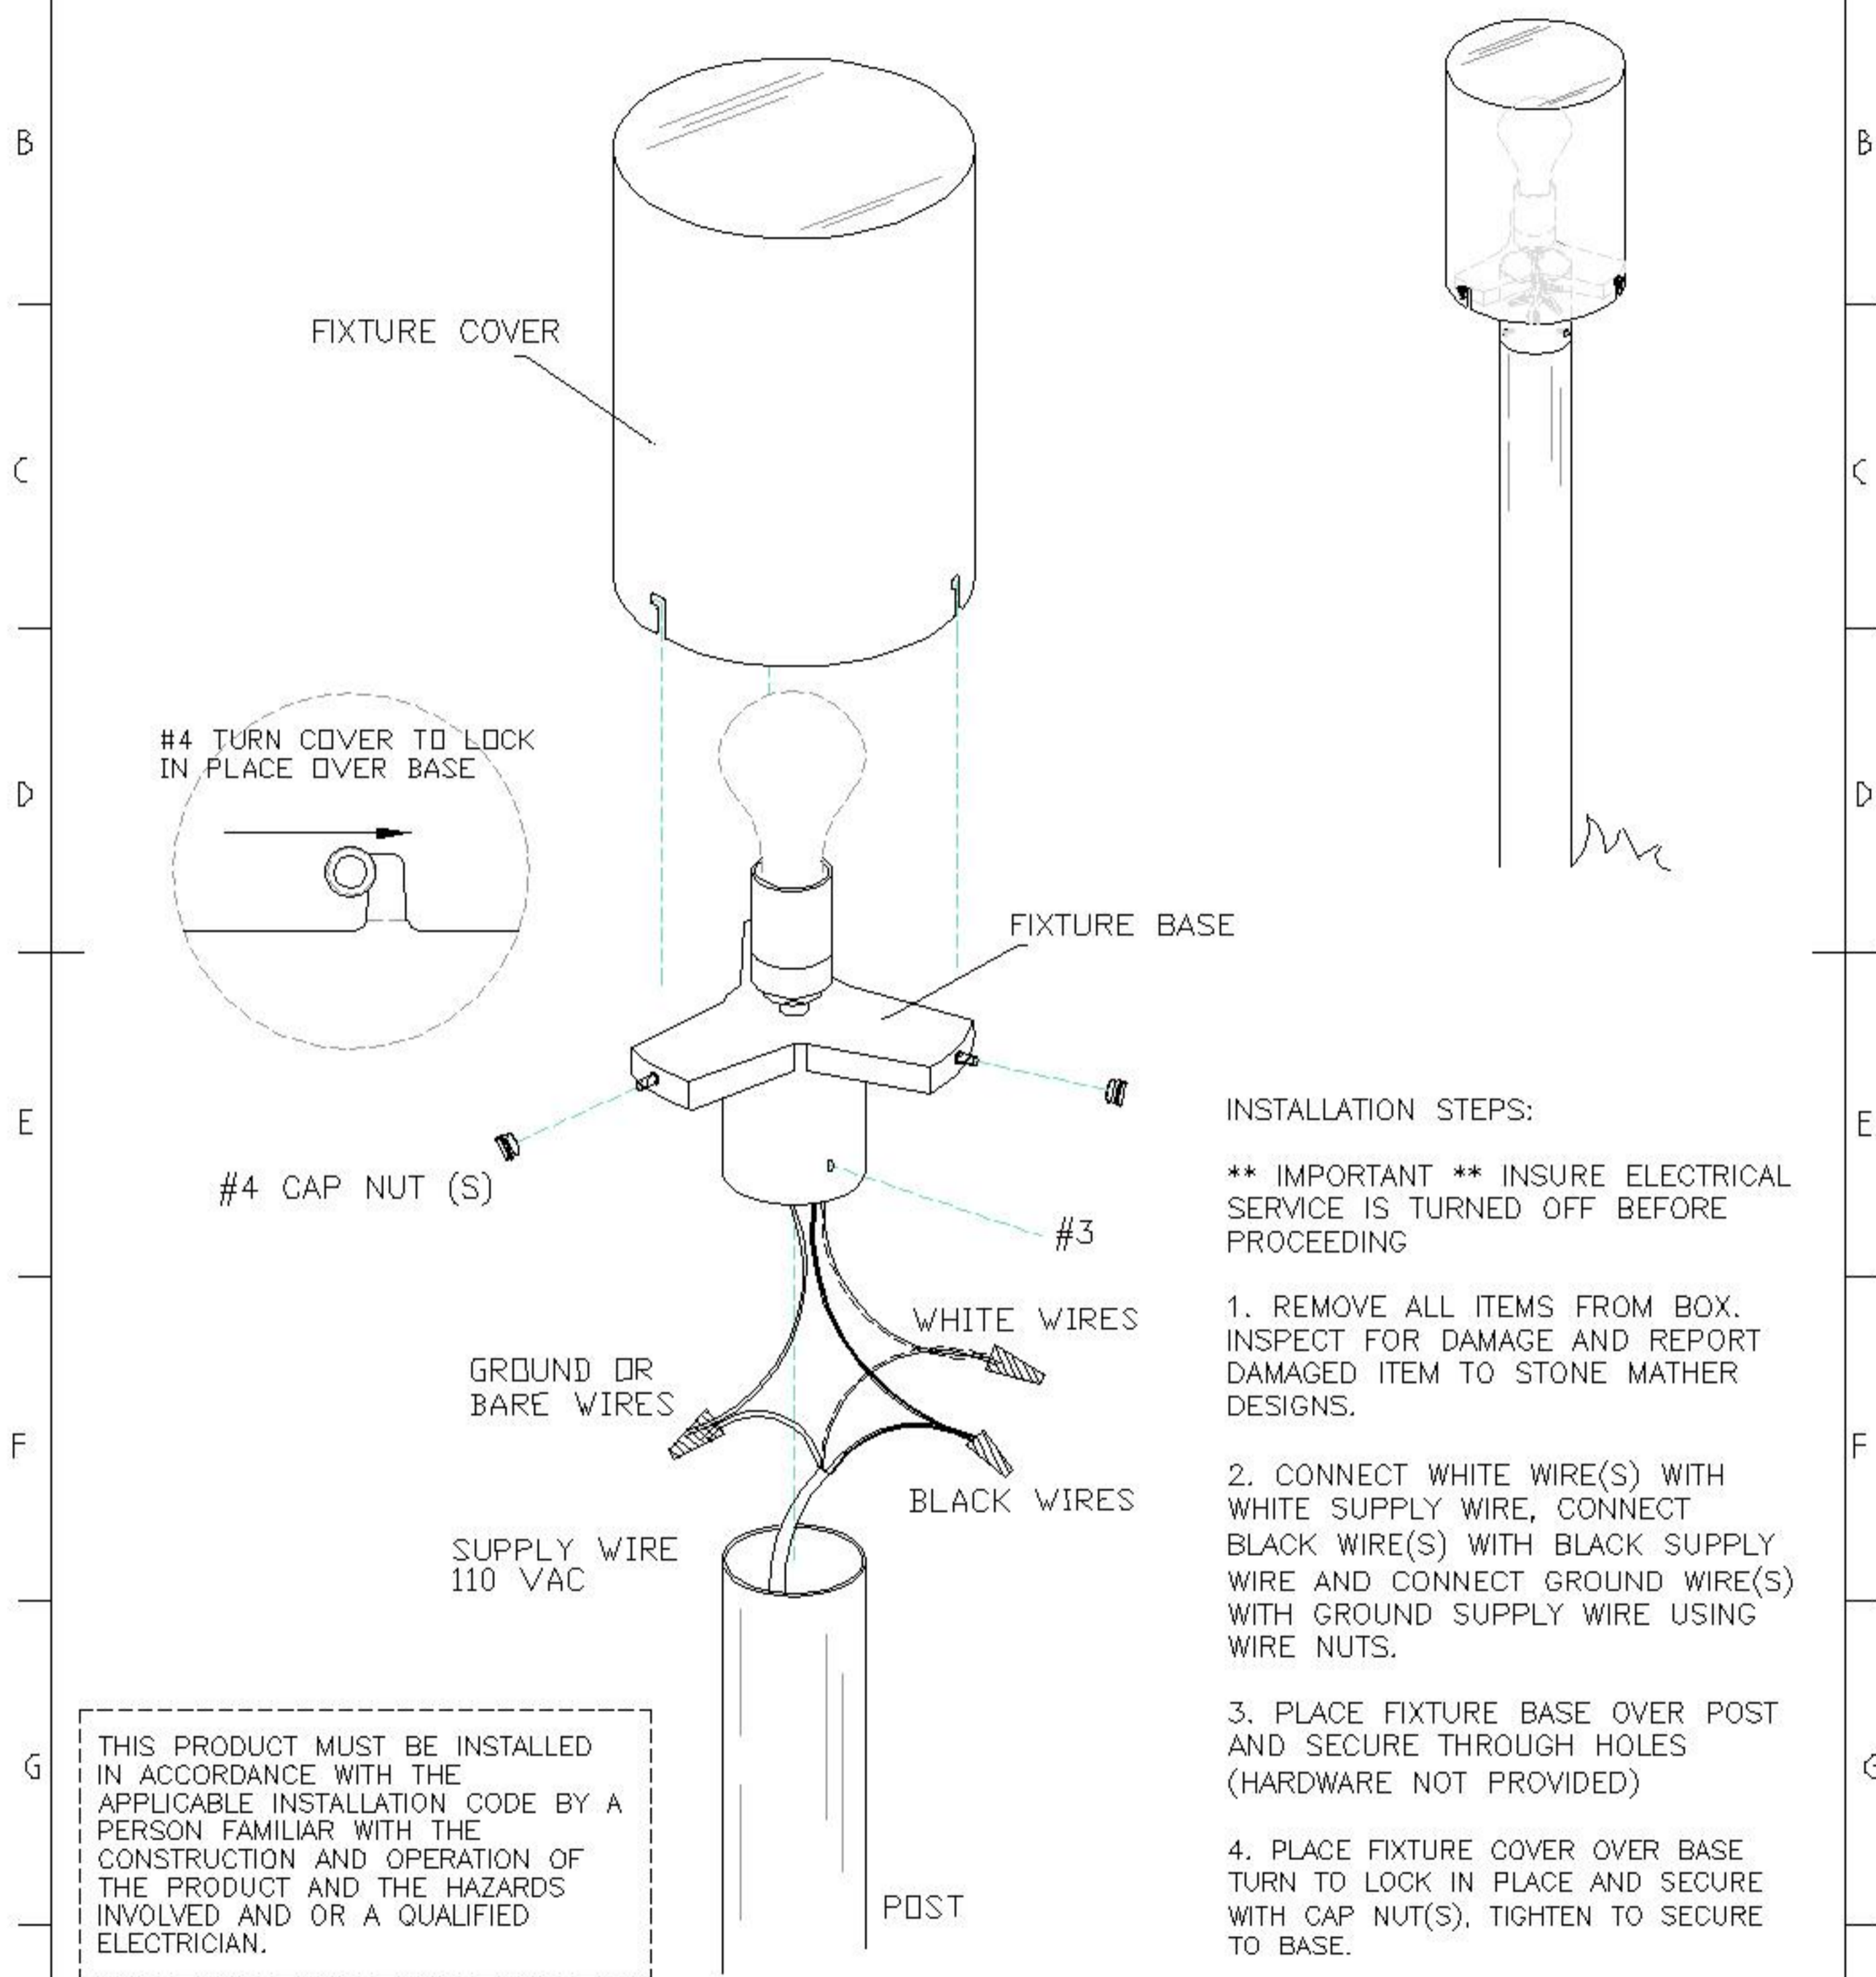

INSTALLATION STEPS:

**** IMPORTANT **** INSURE ELECTRICAL SERVICE IS TURNED OFF BEFORE PROCEEDING

1. REMOVE ALL ITEMS FROM BOX. INSPECT FOR DAMAGE AND REPORT DAMAGED ITEM TO STONE MATHER DESIGNS.
2. CONNECT WHITE WIRE(S) WITH WHITE SUPPLY WIRE, CONNECT BLACK WIRE(S) WITH BLACK SUPPLY WIRE AND CONNECT GROUND WIRE(S) WITH GROUND SUPPLY WIRE USING WIRE NUTS.
3. PLACE FIXTURE BASE OVER POST AND SECURE THROUGH HOLES (HARDWARE NOT PROVIDED)
4. PLACE FIXTURE COVER OVER BASE TURN TO LOCK IN PLACE AND SECURE WITH CAP NUT(S), TIGHTEN TO SECURE TO BASE.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED AND OR A QUALIFIED ELECTRICIAN.

UNDERWRITERS LABORATORIES COMPLIANCE	
U _L	1. INCANDESCENT FILE #E170691
	2. FLUORESCENT FILE #E172522

STONE MATHER DESIGNS
 4444 Tower Rd. SW
 Albuquerque, NM 87121
 Phone (505) 247-4276
 Fax (505) 247-4538

INSTALLATION INSTRUCTIONS		
POST LIGHT		
Date	3/24/2114	Designed by AVD
		Sheet 1/1