
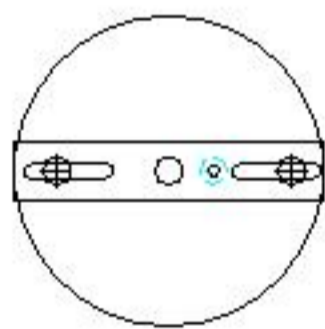
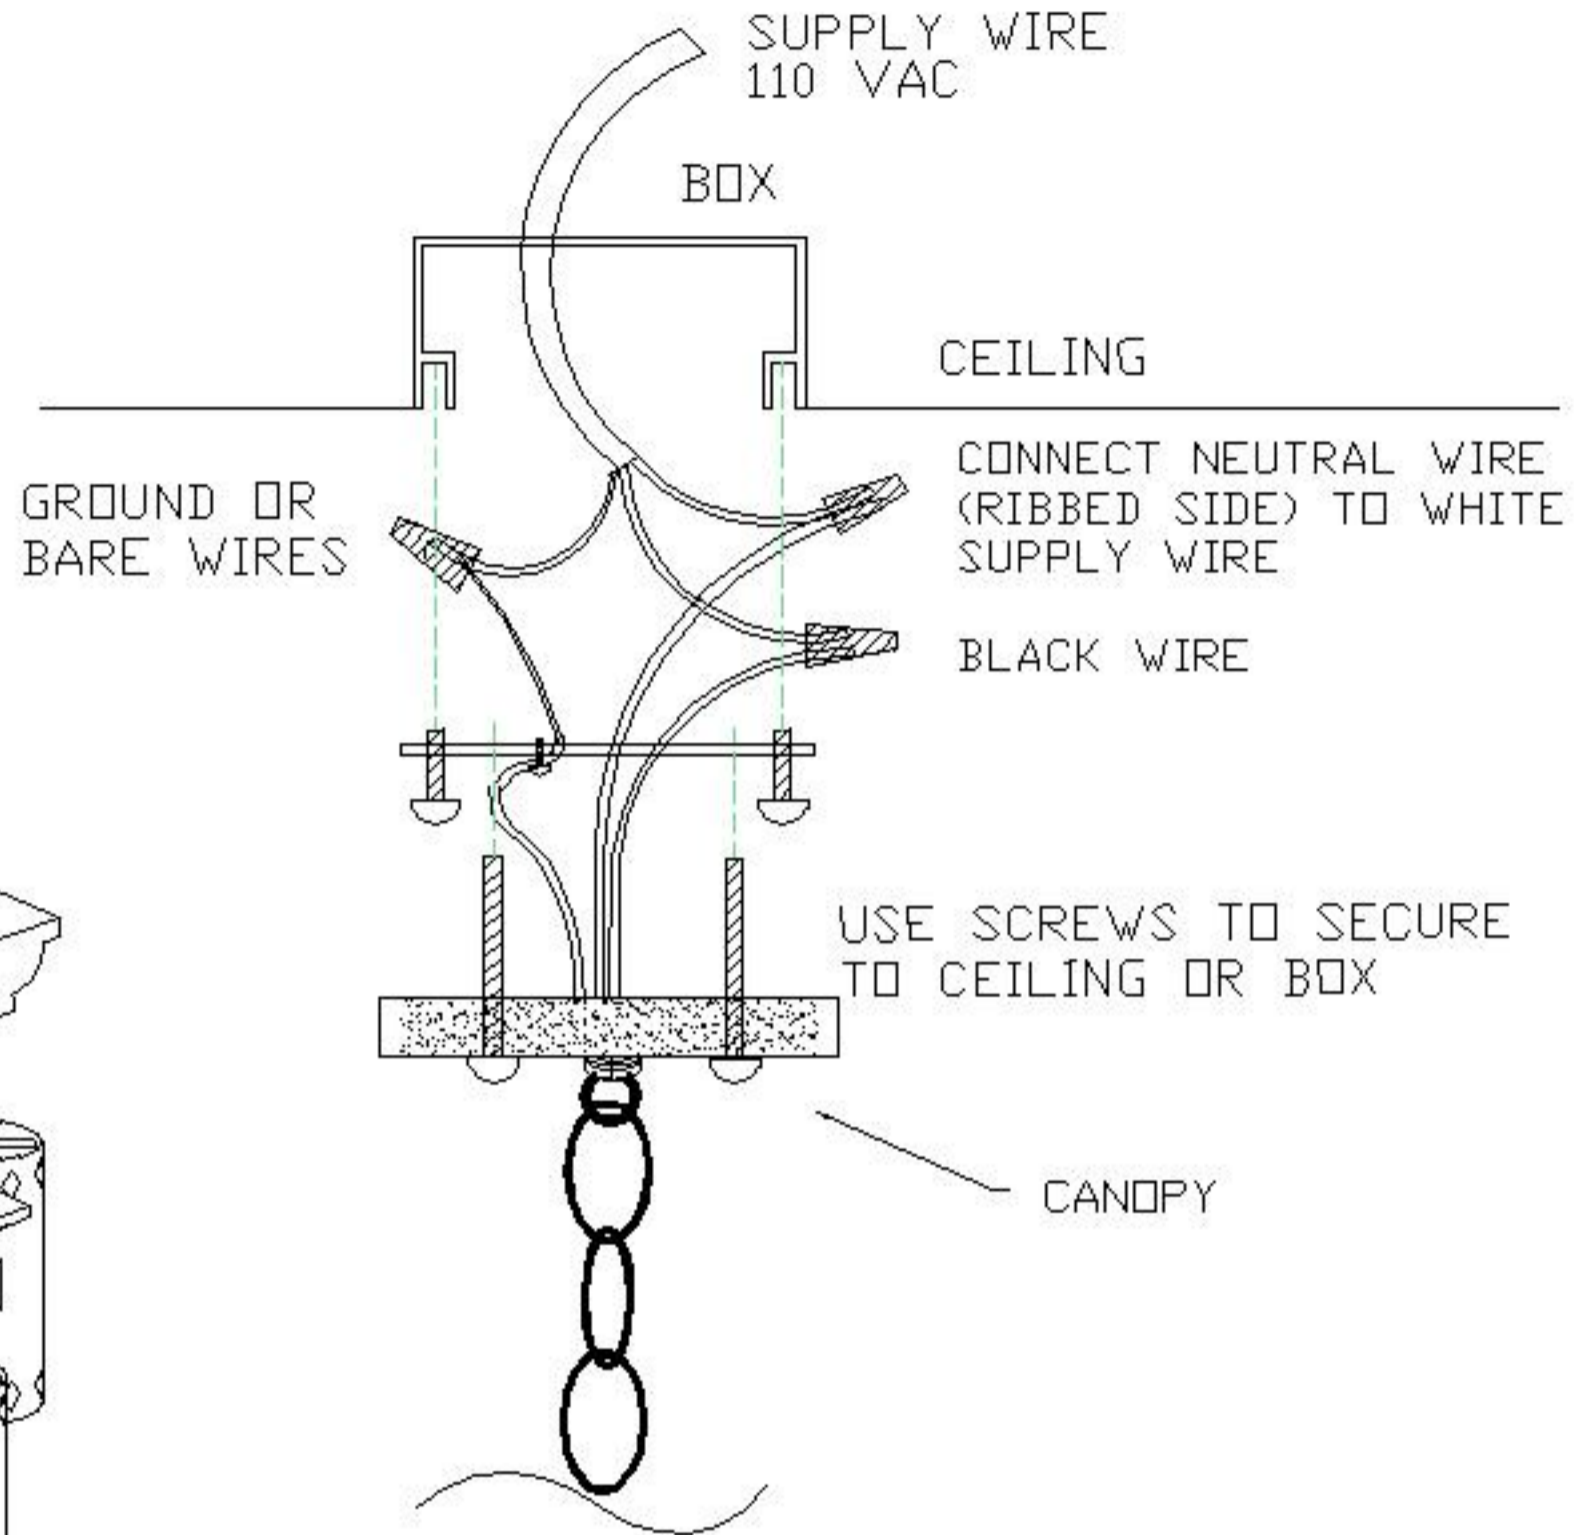


RevN-	Revision Note	Date	Signature
0	INITIAL RELEASE	9/25/04	AVD

**** IMPORTANT ****
INSURE ELECTRICAL POWER IS OFF TO ELECTRICAL BOX BEFORE PROCEEDING!
MINIMUM 90° EC SUPPLY CONDUCTORS

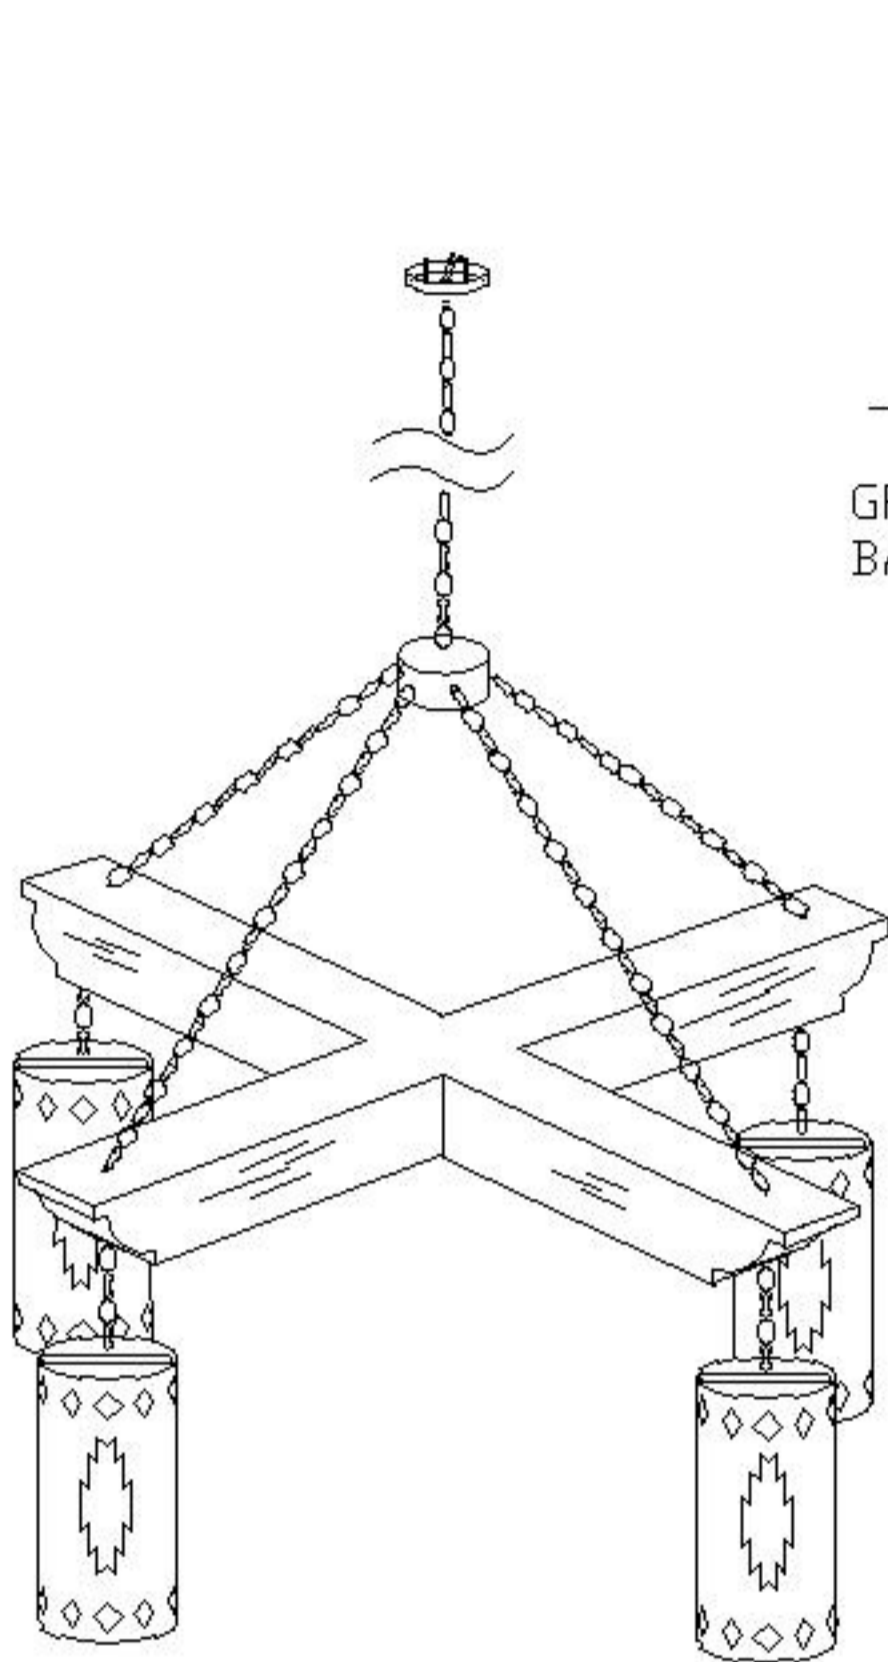

CONNECT CROSS BAR TO JUNCTION BOX

INSTALLATION STEPS:

**** IMPORTANT **** INSURE ELECTRICAL SERVICE IS TURNED OFF BEFORE PROCEEDING

1. REMOVE ALL ITEMS FROM BOX. INSPECT FOR DAMAGE AND REPORT DAMAGED ITEM TO STONE MATHER DESIGNS.
2. FASTEN MOUNTING CROSS BAR TO OUTLET BOX.
3. CONNECT NEUTRAL WIRE (RIBBED SIDE) WITH WHITE SUPPLY WIRE AND CONNECT HOT WIRE WITH BLACK SUPPLY WIRE USING WIRE NUTS.
4. LOOP BARE COPPER GROUNDING WIRE AROUND GROUND SCREW ON CROSS BAR AND TIGHTEN. CONNECT GROUNDING WIRE FROM OUTLET BOX WITH BARE COPPER GROUNDING WIRE FROM FIXTURE USING WIRE NUT.
5. THREAD SCREWS FROM CANOPY INTO CROSSBAR BRACKET AND TIGHTEN TO SECURE TO CEILING.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED AND OR A QUALIFIED ELECTRICIAN.

UNDERWRITERS LABORATORIES COMPLIANCE

U_L

1. INCANDESCENT FILE #E170691
 2. FLUORESCENT FILE #E172522

STONE MATHER DESIGNS

4444 Tower Rd. SW
 Albuquerque, NM 87121
 Phone (505) 247-4276
 Fax (505) 247-4538

INSTALLATION INSTRUCTIONS

CEDAR CROSSBAR CHANDELIER

VCH4

Date	9/25/2014	Designed by	AVD	Sheet	1/1
------	-----------	-------------	-----	-------	-----

A
B
C
D
E
F
G
H

A
B
C
D
E
F
G
H

1 2 3 4 5 6

1 2 3 4 5 6